


Installation Instructions :

#2540-MT : Clip - on Mouse Tray w/ Custom Wrist Rest

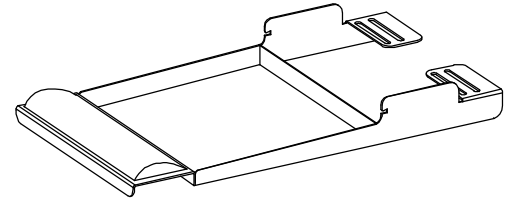

Mounting Keyboard tray to shelf surfaces : The Clip-on Mouse

Tray (#2540-MT) can be mounted to the underside of all 4- Point Tilt shelves & all Cantilevered shelves (26", 50" & 72" wide) except the Light Duty Cantilevered shelves.

STEP - 1 : Place the mouse tray onto the underside of the shelf. The bottom lip of the shelf is to be mated with the two slots at each end of the mouse tray. The tray must be tilted as shown in #1

STEP - 2 : While holding the tray against the shelf (as shown in #2) tilt the front of the tray down until it is seated. It will stay in place at this point.

STEP - 3 : Position the tray (either left or right) to where the slots in the tray match the threaded holes in the underside of the shelf stiffener. Install a standard screw (#12-24) through the slot and into the threaded hole in the stiffener until it is snug. This will secure the mouse tray into place.

